


Waterproofing in socket area with COMBIFLEX® - High Build System

- According to factory specifications -

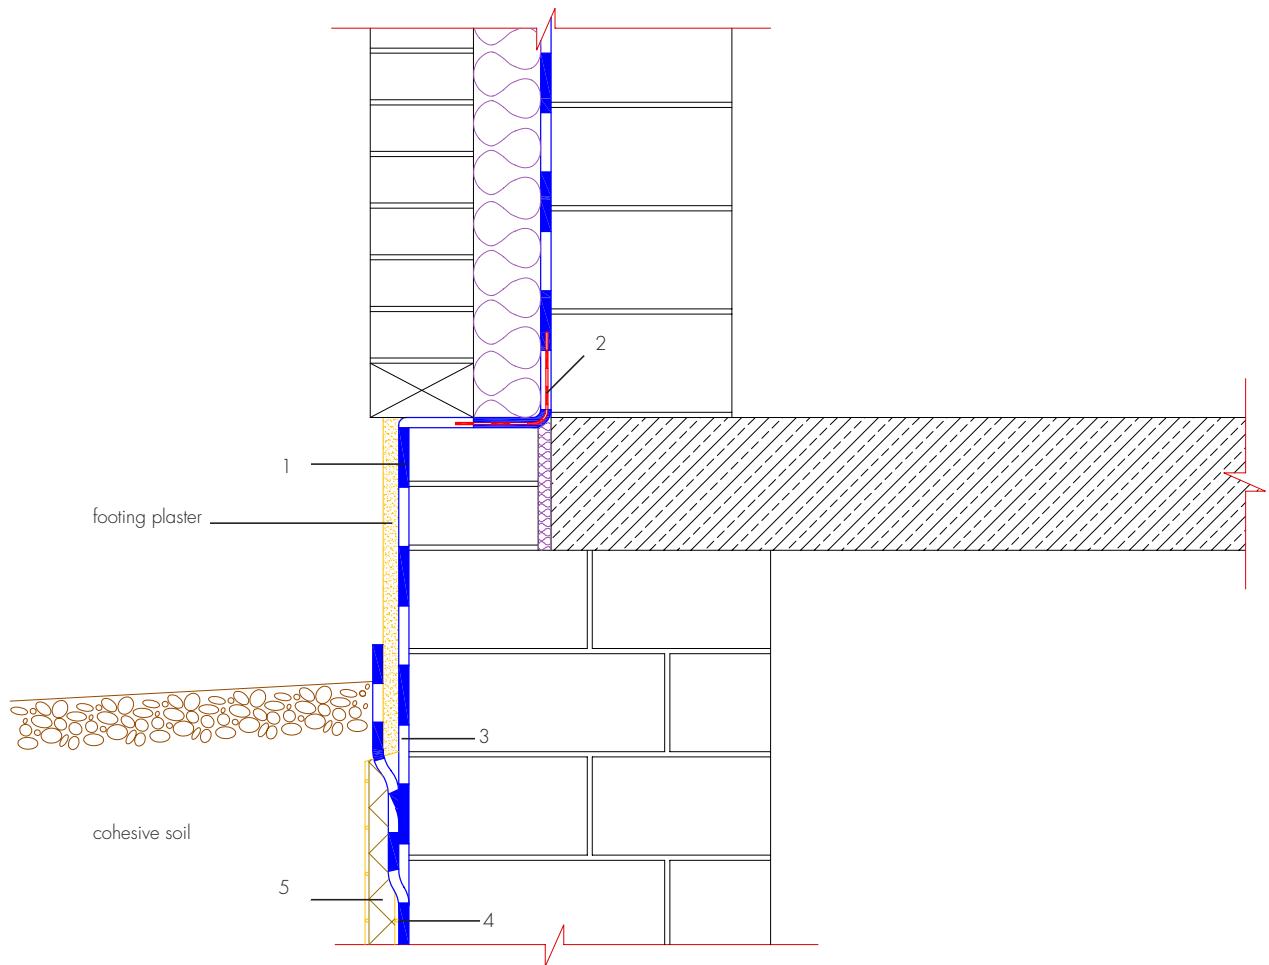

1. Waterproofing with AQUAFIN-2K/M
2. Inlay of ASO-Joint-Tape-2000-S
3. Waterproofing with COMBIFLEX-High Build system
4. ASO-Systemvlies-02 protective mesh
5. Protection of waterproofing with INA Schutz- und Drainelement (INA protective board)