


Pipe penetration waterproofing with **COMBIFLEX®-High Build System**

– According to factory specifications –

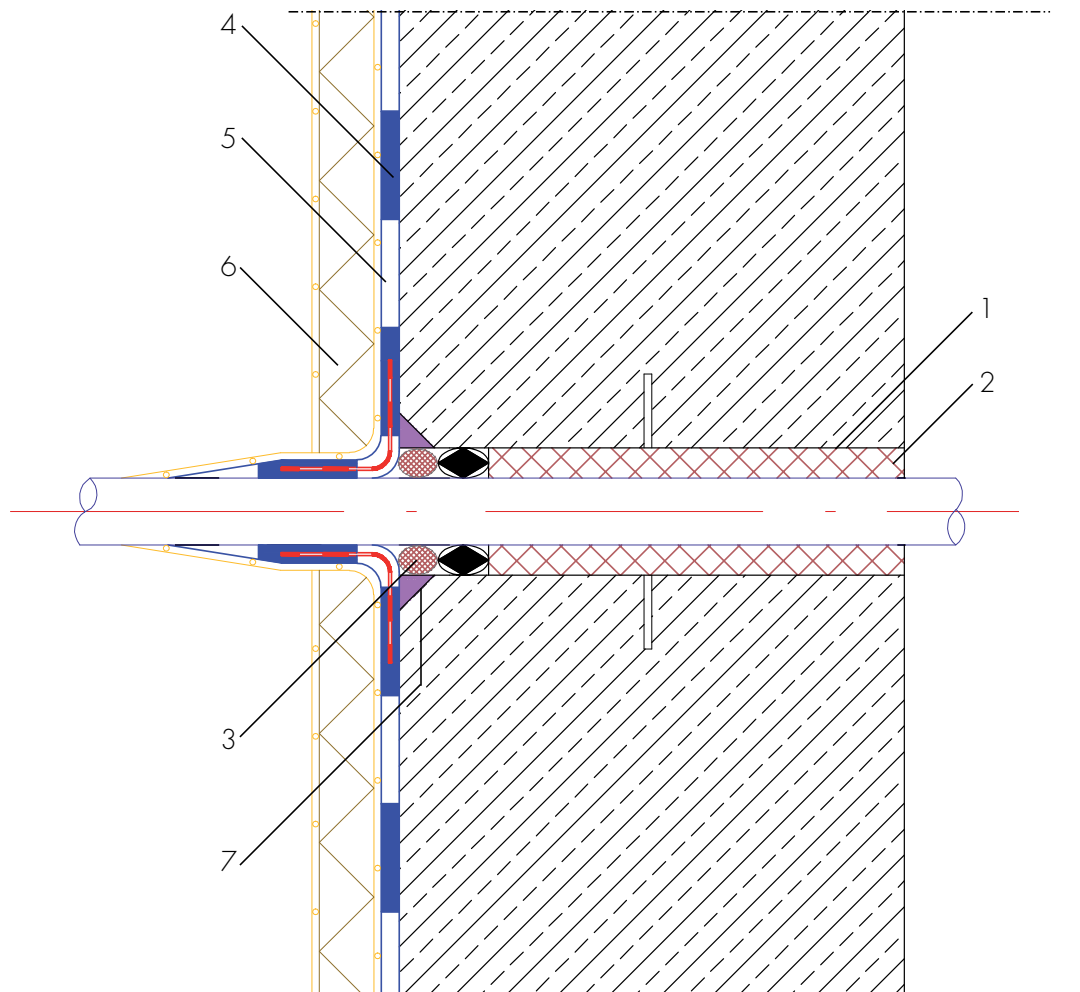

- 1 Pipe sleeve (acc. to regulations for planning and installing below grade flexible slurry waterproofing materials)
- 2 Foam grouting of the hollow space
- 3 Waterproofing flange
- 4 Waterproofing COMBIFLEX-High Build System
- 5 ASO-Systemvlies-02 protective mesh
- 6 Waterproofing protection layer through suitable measures
- 7 AQUAFIN-1K – stiff plastic consistency