


Horizontal waterproofing in two shell masonry

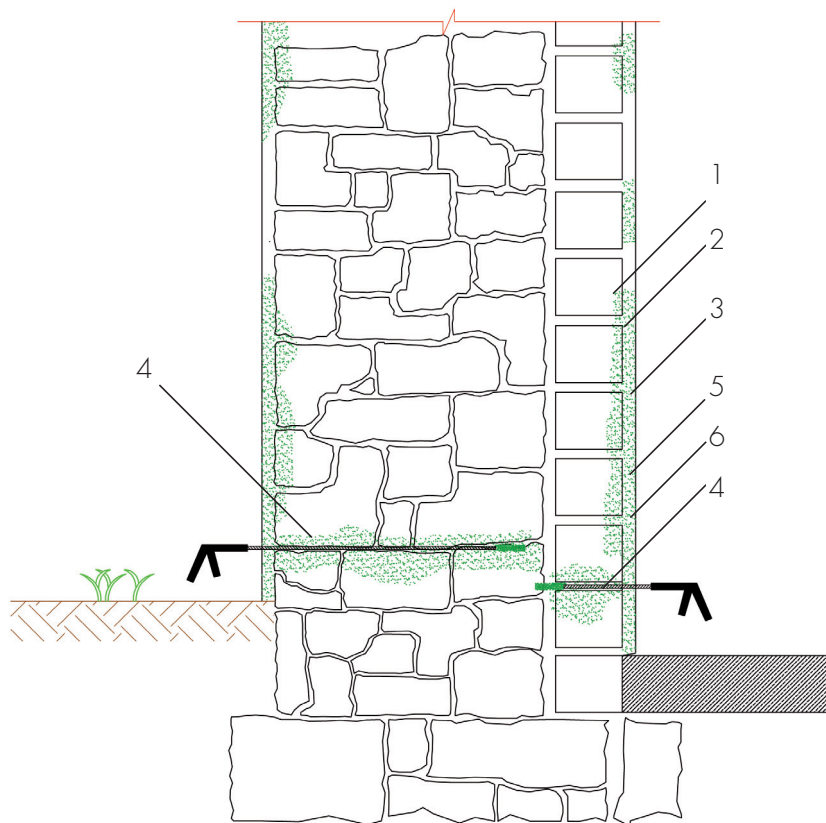

1. Salt treatment with ESCO-FLUAT
2. Semi-covered rough cast THERMOPAL-SP
3. Restoration plaster THERMOPAL-SR24 or THERMOPAL-SR44
4. Horizontal barrier with AQUAFIN-F or AQUAFIN-IB2
Horizontal barrier: with pressure
Hole depth: brick. /. 5 cm
Hole distance: 10-12 cm
5. Fine plaster THERMOPAL-FS33
6. Silicate paint ADICOR-SK